

## PAGE 4

### Instructions for raising awning

1. Remove the awning handle and awning lock bar from the brackets inside the vehicle above side door.
2. Wind awning out and install locking bar – support awning till legs are down.
3. Drop outer legs and set height.
4. Peg down legs, 2 pegs per leg ( pegs and hammers stored with aerial guy rope pegs above side door.) Also use short ropes and peg down as well.
5. To Close, first check that all debris is removed, then reverse procedure, winding awning until the two red tags lock in.

### Satellite Phone

For instructions for operation, see laminated sheet found with satellite phone , stored in locker No 3 (three).

### Notes

Front Radio runs off rear battery.

Rear battery is charging when vehicle is running.

Green command light runs off rear battery.

Red/Blue lights run off front (vehicle) battery.

Generator supplies 240V, charges rear battery via the inbuilt battery charger –also vehicle battery.

Battery isolator switch disconnects rear battery.

Mobile phone, when in front, runs off the front battery.

Must remove key to ensure vehicle isolator is OFF – place key in dashboard hole.

Mains switch (generator) -- put to MAINS if external lead is connected to a 240V Supply –eg at a station

Put to ONAN if using generator – ONAN is the brand name of the generator.

Radios will run for an hour + - even if the generator is not running.

### Fridge Operation

1. Plug into 12V system plug under the edge of desk to the left of the fridge.
  2. Push ON button – on Fridge.
  3. Push Temperature setting to position 3 (three)
  4. Push Turbo button on ( this will cut out when fridge gets to set temperature).
- Note Only use 240V power when vehicle is plugged into outside 240V supply.**